

Pro Keyboard [DVR PRO 4/8/16]

[This note applies to all ICR Pro series DVRs]

Step 1: First start off by connecting your controller to the RS485 terminals in the back of the Pro DVR. From the controller connect a RJ45 straight through cable from “Rx In”. At the other end of the cable, cut the RJ45 head off and use the solid brown and solid orange wires for the Rx + and Rx – (Rx + = Orange RX - = Brown). Connect the two wires to the respected terminals on the Pro RS485 terminal board. Connect the terminal board to the back of the Pro DVR. Now power the controller and your physical setup should be complete.



Step 2: Once the controller is properly connected and powered, press “WIDE” → The DVR’s System ID number (which can be found in the system properties of the DVR) → “MON” → “PATTERN” → “SHIFT” (both PATTERN and SHIFT should be lit red). You should now have control of the DVR that was selected in the DVR system ID number. To Change which DVR you control, follow the first couple steps to change the DVR system ID. Note: If it doesn’t change the IDs, make sure “PATTERN” and “SHIFT” are off before changing.

Step 3: Most of the buttons on the controller do what they say they do such as “MENU” which opens the main menu of the DVR. Also “ENTER” and “PREVIOUS” enters and escapes out of changes and menus. The number pad will switch to individual channels and on the top right you have your split screens.



Step 4: If you want to do a search from the main menu, follow the corresponding keys below:

Note: You must first start the playback by pressing “AUX” in the channel you want (must be in a single channel view) then you can use the functions below.

- “AUX” = Playback
- “TELE” = Pause
- “WIDE” = Stop
- “NEAR” = Fast Forward
- “FAR” = Rewind
- “LAST” = Next File
- “NEXT” = Previous File
- “TELE” + “AUX” = Frame Play